

FAQ: Formatting your SD Card



There are many reasons why an SD card would need to be reformatted. Cyclops Gear recommends that you format your SD card regularly and always before first using it in one of our Cyclops Gear Cameras.

There are three ways that you can format your SD card.


1. Through your CG360 Camera
2. Through the CG360 App
3. On your computer

We will cover option 1 and 2.

THROUGH YOUR CG360 CAMERA

1. Turn on your 360 Camera and press the power button  until you get to the Settings Menu. Press the Okay button  to enter into the menu.




2. Once your in the settings menu, press the power button until the cursor is under the Camera Settings Tab .



3. Use the up and down buttons to scroll down to the Format option. Press the Okay button.




4. Use the up and down arrows to select the Confirm.

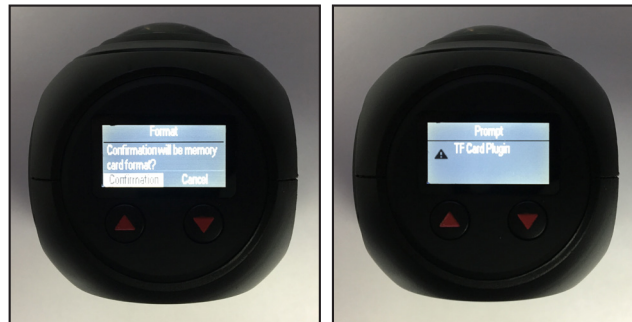




Your SD Card should now be formatted.

THROUGH THE CG360 APP

1. Open your camera through the App. and Select the Settings Tab in bottom right corner.

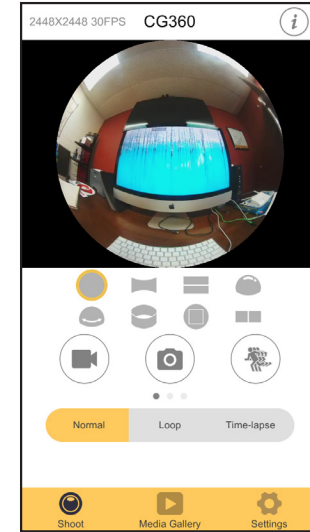

2. Once in the settings menu, scroll down to the Format option. Select this, and press Confirm to format.

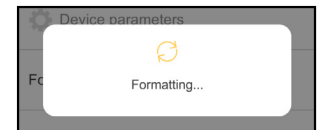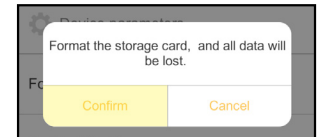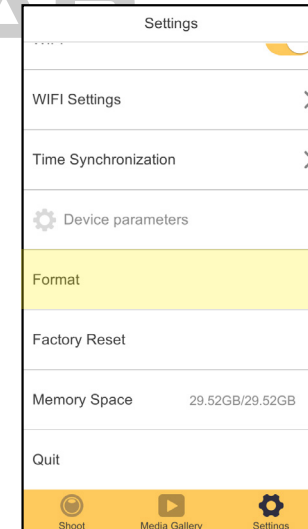

Your SD Card should now be formatted.