

## **FAQ: I can't remove the waterproof case!**

With the view pointer facing away from you, slide the arrow button to the left with your left thumb and hold it there. Using your left thumb as leverage against the back black tab, use your right index finger to lift the short black tab toward you.

